


NOTE: IN THE STATE OF CALIFORNIA, IT IS ILLEGAL TO MODIFY THE EMISSION CONTROL SYSTEM, WHICH INCLUDES THE FUEL INJECTION OF ANY VEHICLE.

Installation Procedures:

Caution: Exhaust system can be extremely hot. Let motorcycle cool down before beginning installation.

Note: Read through all instructions before beginning installation. **Tools Needed:**

11mm, 12mm, and 14mm sockets 3/8" ratchet and extension Torque wrench 8mm and 10mm wrench 5mm Allen wrench

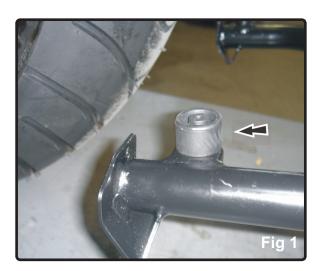



Installation Steps:

- 1. Place motorcycle on it's centerstand.
- 2. Remove passenger and rider seats.
- 3. Carefully remove the rubber stopper from the centerstand and install it onto the Yoshimura tailpipe (see Fig 1 and Fig 2).

** NOTE: When installing the rubber stopper the use any type of lubricant will make the installation of the stopper easier.

- 4. Locate and remove the cover shielding the exhaust valve by removing the two 5mm Allen head bolts (see Fig 3).
- 5. Loosen and remove both cables from the exhaust valve by loosening the lock nuts (see Fig 4).

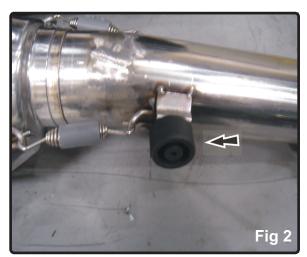

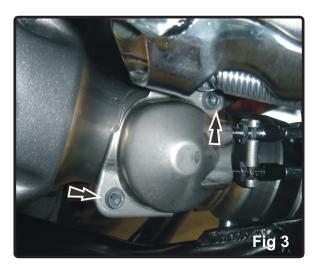


Page 2

Installation Procedures:


6. Locate the exhaust valve controller at the rear of the fuel tank and remove the exhaust valve controller by removing the one nut holding it in place. Remove the shield and cables from the exhaust controller. Remove the exhaust valve cables from the motorcycle. Reinstall the shield and exhaust valve controller back into the stock location (see Fig 5).

NOTE: Do not disconnect any electrical wires from the exhaust valve controller. The exhaust valve controller must remained plugged in electrically. Remove the exhaust valve cables only.

- 7. Loosen lower stock muffler clamp (see Fig 6).
- 8. Remove the stock upper muffler mounting bolt and remove stock muffler (see Fig 7).
- 9. Install exhaust clamp heatshield into exhaust clamp. Install exhaust clamp onto Yoshimura muffler.
- 10. Slide supplied exhaust clamp over the end of the tailpipe.
- 11. Install Yoshimura muffler and tailpipe onto the stock header and using the stock and supplied hardwear, Torque the muffler mounting bolt to 2.5kg-m (18 lb-ft) (see Fig 8).
- 12. Torque Yoshimura's exhaust clamp to 1.25 kg-m (9 lbft) (see Fig 9).

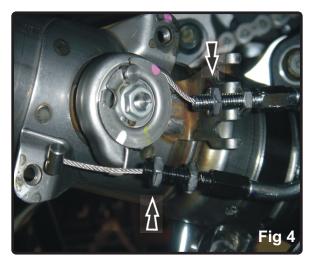




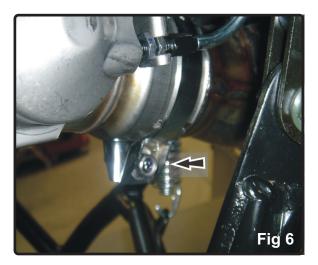


Installation Procedures:

13. Before starting motorcycle, check for proper clearance between new exhaust system and motorcycle (i.e. radiator, oil pan, swing-arm, etc.). If any problem is found, please carefully follow through the installation steps again. If problem still persists, please call Yoshimura technical department at (800)634-9166 / in CA (909)628-4722.

Note: After starting motorcycle, it is normal for new exhaust system to smoke until oil residue burns off.

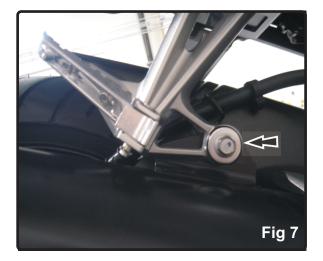




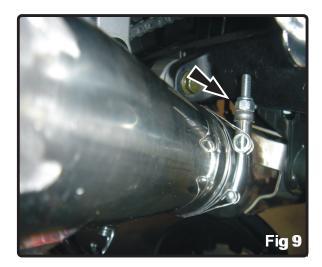

Part List:

Page 5

#132127 (2,5,7)

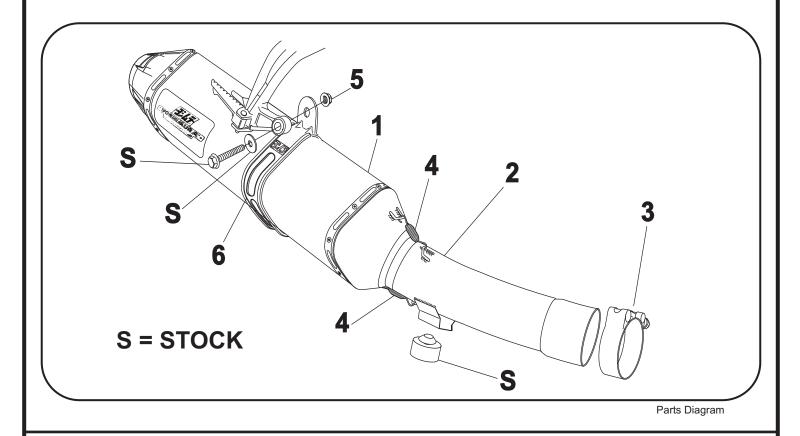

NO.	DESCRIPTION	QTY	PART #
1	Yoshimura TRC Muffler	1	
	Carbon Fiber Sleeve		CRTRC126W
	Stainless Steel Sleeve		SRTRC126W
	Titanium Sleeve		TRTRC126W
2	Yoshimura Tailpipe	1	1321-435
3	Clamp	1	20069
4	Medium Exhaust Springs	2	RACE-SPS-1
5	10mm Nut	1	10MMFNUT
6	Exhaust Pipe Clamp	1	
	Clamp for Titanium and Stainless		CTS105X
	Clamp for Carbon Fiber		CTS105
**	Slotted Heatsheild TRC	1	HT SHLDTRS
**	Yoshimura Spring Puller Tool	1	ST-200
**	Yoshimura Vinyl Sticker	2	17028-BLK